


Additional Information


Due to upgrading of firmware, the following functions are added after the printing of supplied owner's manual.

Connecting with Multiple Locations

This unit is designed to enable a conference call between up to 4 locations when connected to a network via VC1. It is possible to call a new location (branch or department) during the call.

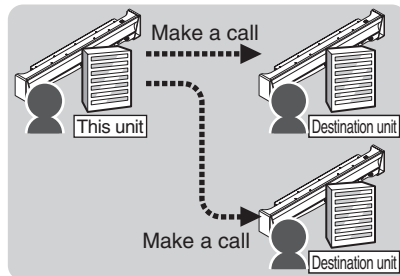

Call another location during a call

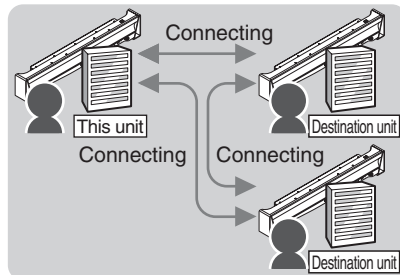

Connecting more than two locations

Configuring the Multipoint function

To enable a conference call between multiple locations, you need to configure the following settings in the Video Settings menu.

1 Press MENU.

The setting screen appears.



2 Press Δ or ∇ to select “Video Settings”, and press ENTER.

The video setting screen appears.



3 Press Δ or ∇ to select “Video CODEC”, and press ENTER.

4 Press Δ or ∇ to select “H.261”, and press ENTER.

5 Press Δ or ∇ to select “Multipoint”, and press ENTER.

6 Press Δ or ∇ to select “Enable”, and press ENTER.

The setting is saved.

Talking with multiple locations

The following description is given from an example of calling a unit by entering the number of the unit.

1 When the initial screen appears, press PHONE or CANCEL.

The line connection screen appears.



Press CANCEL repeatedly to display the initial screen.

2 Press Δ or ∇ to select “Number”, and press ENTER.

The menu for specifying numbers appears.



3 Use the numeric keys to enter the number of the destination unit.



- To enter “.” (Dot), press * .
- To correct a number that has been entered, use \leftarrow or \rightarrow to position the cursor over the number to be corrected, and enter the new number.

4 Press PHONE or ENTER.

The multipoint connection screen appears.




5 Press ENTER, and carry out step 2 to 4 repeatedly to add the location to talk with.



- Press ◀ or ▶ to view the selected unit.
- To change the unit selected, press CANCEL to delete, and select another unit.

6 Press .

The calling screen appears.

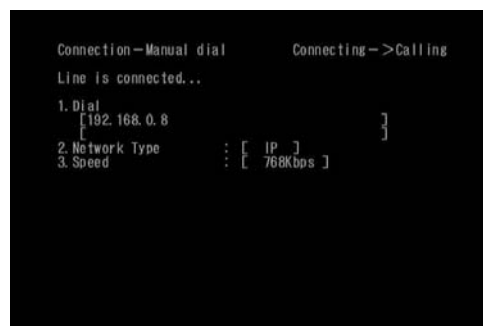

Once the destination unit performs the operation for answering the call, the connection between both units is established, and this unit is ready for the videoconference. The screen appearance will be different depending on the number of the locations to talk with.

■ Adding another location during a call

To call another unit during a call, follow the procedure below.

1 Press during the call.

The line connection screen appears.

2 Press ▲ or ▼ to select a calling method from “Address Book”, “Number” and “Call History”, and press ENTER.

3 Specify the unit to talk with, and press ENTER.

■ To disconnect a call

If you are talking with multiple locations, follow the procedure below to disconnect the call.

1 Press during the call.

The disconnect screen appears.

2 Press ▲ or ▼ to select the unit to be disconnected from the line, and press ENTER.

The confirmation screen appears.

3 Press ENTER.

The line is disconnected.

Answering another call during a call

If you receive a call from another unit, you can talk with the unit and the locations connected to the unit. Screen appearance will be different depending on the number of the locations to talk with.

Configuring the Camera White Balance

You can configure the camera white balance according to the room's brightness or operating environment. Normally, set to “Automatic” (default setting).

1 Press MENU.

The setting screen appears.



2 Press ▲ or ▼ to select “Video Settings”, and press ENTER.

The video setting screen appears.



3 Press ▲ or ▼ to select “Camera White Balance”, and press ENTER.

4 Press ▲ or ▼ to select a white balance (“Automatic”, “Cool2”, “Cool1”, “Standard”, “Warm1” or “Warm2”), and press ENTER.

The setting is saved.