


# PJP-EC200 List of SOUND Settings

The settings of PJP-EC200 can be configured by “ETHER mode” or “DIP SW mode”.

If you switch the modes, the setting values are not carried over.

The DIP switch ⑥ changes the mode between “ETHER mode” and “DIP SW mode”.

- In the “ETHER mode”, the settings can be configured from the Web menu.
- In the “DIP SW mode”, the settings can be configured by using the DIP switch on the back. Some settings cannot be changed in this mode.

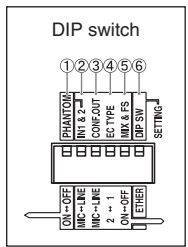

Setting			ETHER mode		DIP SW mode		Recital
			Value	Default value	Fixed value	Set contents	
Echo Canceller	MIC/LINE IN1	Use	• Enable • Disable	Enable	Enable		
		Level	• Low • Middle • High	Middle		Operation : DIP switch ④ • EC TYPE1 – Level: Middle – Mic Type: Fixed Mic	
		Mic Type	• Hand Mic • Fixed Mic	Fixed Mic		• EC TYPE2 – Level: High – Mic Type: Hand Mic	
		Mic/Sp Distance (0–40m)	0m–40m	0m		• Default value: 0m • Adjusted automatically by the AUTO ANALYZER	
	MIC/LINE IN2	Use	• Enable • Disable	Enable	Enable		
		Level	• Low • Middle • High	Middle		Operation : DIP switch ④ • EC TYPE1 – Level: Middle – Mic Type: Fixed Mic	
		Mic Type	• Hand Mic • Fixed Mic	Fixed Mic		• EC TYPE2 – Level: High – Mic Type: Hand Mic	
		Mic/Sp Distance (0–40m)	0m–40m	0m		• Default value: 0m • Adjusted automatically by the AUTO ANALYZER	
Feedback Suppressor	MIC/LINE IN1	Use	• Enable • Disable	Enable	Enable		• These values are used in normal operation and not used when the AUTO ANALYZER is run. When the AUTO ANALYZER is run, the following values are used. – Level: –12dB – Band width: 1/10oct
		Level	• –6dB • –12dB • –18dB	–12dB	–12dB		
		Band width	• 1/10oct • 1/60oct • 1/93oct	1/93oct	1/93oct		
	MIC/LINE IN2	Use	• Enable • Disable	Enable	Enable		
		Level	• –6dB • –12dB • –18dB	–12dB	–12dB		
		Band width	• 1/10oct • 1/60oct • 1/93oct	1/93oct	1/93oct		
Noise Reduction	MIC/LINE IN1	Use	• Enable • Disable	Enable	Enable		
		Level	• 6dB • 12dB • 17dB	17dB	17dB		
	MIC/LINE IN2	Use	• Enable • Disable	Enable	Enable		
		Level	• 6dB • 12dB • 17dB	17dB	17dB		
	CONFERENCE IN	Use	• Enable • Disable	Enable	Enable		
		Level	• 6dB • 12dB • 17dB	17dB	17dB		
Mixer	MIC/LINE IN1	Output to LINE OUT	• Enable • Disable	Disable		Operation : DIP switch ⑤	
	MIC/LINE IN2	Output to LINE OUT	• Enable • Disable	Disable		Operation : DIP switch ⑤	
Auto Gain Controller	MIC/LINE IN1	Use	• Enable • Disable	Disable	Disable		
		Level	• 6dB • 10dB • 20dB	6dB	6dB		
	MIC/LINE IN2	Use	• Enable • Disable	Disable	Disable		
		Level	• 6dB • 10dB • 20dB	6dB	6dB		
Gain	MIC/LINE IN1	MIC/LINE	• MIC • LINE	LINE		Operation : DIP switch ②	
		Gain	• MIC : –∞, –10~+54dB • LINE : –∞, –37~+26.5dB	–∞		Operation : GAIN knob	In the ETHER mode, the value of GAIN knob becomes effective if you operate the GAIN knob.
	MIC/LINE IN2	MIC/LINE	• MIC • LINE	LINE		Operation : DIP switch ②	
		Gain	• MIC : –∞, –10~+54dB • LINE : –∞, –37~+26.5dB	–∞		Operation : GAIN knob	In the ETHER mode, the value of GAIN knob becomes effective if you operate the GAIN knob.
Level	MIC/LINE IN1	Level	–∞, –56.7~+12dB	0.0dB	0.0dB		
		MUTE	• ON • OFF	OFF	OFF		
	MIC/LINE IN2	Level	–∞, –56.7~+12dB	0.0dB	0.0dB		
		MUTE	• ON • OFF	OFF	OFF		
	CONFERENCE IN	Level	–∞, –56.7~+12dB	0.0dB	0.0dB		
		MUTE	• ON • OFF	OFF	OFF		
	CONFERENCE OUT	MIC/LINE	• MIC • LINE	LINE		Operation : DIP switch ③	
		Level	–∞, –56.7~+12dB	0.0dB	0.0dB		
LINE OUT	Level	–∞, –56.7~+12dB	0.0dB	0.0dB			
	MUTE	• ON • OFF	OFF	OFF			
Phantom Power	MIC/LINE IN1	48V Power Supply	• Enable • Disable	Enable		Operation : DIP switch ①	The phantom power is supplied only when “Enable” is set in the ETHER mode and the DIP switch ① is set to “ON”. PHANTOM LED lights up.
	MIC/LINE IN2	48V Power Supply	• Enable • Disable	Enable		Operation : DIP switch ①	

\* This manual has been compiled based on the latest version of the firmware as of September 2009.


# PJP-EC200 SOUND Settings 列表

PJP-EC200 的设置可由“ETHER 模式”或“DIP SW 模式”配置。

如果您切换模式，设置值不会保留。

DIP 开关 ⑥ 可在“ETHER 模式”和“DIP SW 模式”之间切换。

- 在“ETHER 模式”下，可从 Web 菜单配置设置。
- 在“DIP SW 模式”下，可使用背面的 DIP 开关配置设置。在此模式下，有些设置无法更改。

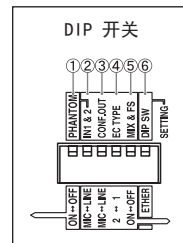

设置	ETHER 模式		DIP SW 模式		叙文		
	值	默认值	固定值	设置目录			
Echo Canceller	MIC/LINE IN1	Use	• Enable • Disable	Enable	Enable		
		Level	• Low • Middle • High	Middle		操作: DIP 开关④ • EC TYPE1 – Level: Middle – Mic Type: Fixed Mic	
		Mic Type	• Hand Mic • Fixed Mic	Fixed Mic		• EC TYPE2 – Level: High – Mic Type: Hand Mic	
		Mic/Sp Distance (0–40m)	0m–40m	0m		• Default value: 0m • 由 AUTO ANALYZER 自动调节	
	MIC/LINE IN2	Use	• Enable • Disable	Enable	Enable		
		Level	• Low • Middle • High	Middle		操作: DIP 开关④ • EC TYPE1 – Level: Middle – Mic Type: Fixed Mic	
		Mic Type	• Hand Mic • Fixed Mic	Fixed Mic		• EC TYPE2 – Level: High – Mic Type: Hand Mic	
		Mic/Sp Distance (0–40m)	0m–40m	0m		• 默认值: 0m • 由 AUTO ANALYZER 自动调节	
Feedback Suppressor	MIC/LINE IN1	Use	• Enable • Disable	Enable	Enable		
		Level	• –6dB • –12dB • –18dB	–12dB	–12dB		• 这些值适用于普通操作，如果 AUTO ANALYZER 运行，则不适用。AUTO ANALYZER 运行时，将使用以下值。 – Level: –12dB – Band width: 1/10oct
		Band width	• 1/10oct • 1/60oct • 1/93oct	1/93oct	1/93oct		
	MIC/LINE IN2	Use	• Enable • Disable	Enable	Enable		
		Level	• –6dB • –12dB • –18dB	–12dB	–12dB		• 这些值适用于普通操作，如果 AUTO ANALYZER 运行，则不适用。AUTO ANALYZER 运行时，将使用以下值。 – Level: –12dB – Band width: 1/10oct
		Band width	• 1/10oct • 1/60oct • 1/93oct	1/93oct	1/93oct		
Noise Reduction	MIC/LINE IN1	Use	• Enable • Disable	Enable	Enable		
		Level	• 6dB • 12dB • 17dB	17dB	17dB		
	MIC/LINE IN2	Use	• Enable • Disable	Enable	Enable		
		Level	• 6dB • 12dB • 17dB	17dB	17dB		
	CONFERENCE IN	Use	• Enable • Disable	Enable	Enable		
		Level	• 6dB • 12dB • 17dB	17dB	17dB		
Mixer	MIC/LINE IN1	Output to LINE OUT	• Enable • Disable	Disable		操作: DIP 开关⑤	
	MIC/LINE IN2	Output to LINE OUT	• Enable • Disable	Disable		操作: DIP 开关⑤	
Auto Gain Controller	MIC/LINE IN1	Use	• Enable • Disable	Disable	Disable		
		Level	• 6dB • 10dB • 20dB	6dB	6dB		
	MIC/LINE IN2	Use	• Enable • Disable	Disable	Disable		
		Level	• 6dB • 10dB • 20dB	6dB	6dB		
Gain	MIC/LINE IN1	MIC/LINE	• MIC • LINE	LINE		操作: DIP 开关②	
		Gain	• MIC : –∞, –10~+54dB • LINE : –∞, –37~+26.5dB	–∞		操作: GAIN 旋钮	在 ETHER 模式下，若您操作 GAIN 旋钮，GAIN 旋钮的值便会生效。
	MIC/LINE IN2	MIC/LINE	• MIC • LINE	LINE		操作: DIP 开关②	
		Gain	• MIC : –∞, –10~+54dB • LINE : –∞, –37~+26.5dB	–∞		操作: GAIN 旋钮	在 ETHER 模式下，若您操作 GAIN 旋钮，GAIN 旋钮的值便会生效。
Level	MIC/LINE IN1	Level	–∞, –56.7~+12dB	0.0dB	0.0dB		
		MUTE	• ON • OFF	OFF	OFF		
	MIC/LINE IN2	Level	–∞, –56.7~+12dB	0.0dB	0.0dB		
		MUTE	• ON • OFF	OFF	OFF		
	CONFERENCE IN	Level	–∞, –56.7~+12dB	0.0dB	0.0dB		
		MUTE	• ON • OFF	OFF	OFF		
	CONFERENCE OUT	MIC/LINE	• MIC • LINE	LINE			操作: DIP 开关③
		Level	–∞, –56.7~+12dB	0.0dB	0.0dB		
LINE OUT	Level	–∞, –56.7~+12dB	0.0dB	0.0dB			
	MUTE	• ON • OFF	OFF	OFF			
Phantom Power	MIC/LINE IN1	48V Power Supply	• Enable • Disable	Enable		操作: DIP 开关①	
	MIC/LINE IN2	48V Power Supply	• Enable • Disable	Enable		操作: DIP 开关①	

\* 本手册乃根据 2009 年 9 月最新版固件编制。